

Resetting the WiFi Network

The Control Hub can be reset to the default WiFi settings. This will reset the password and SSID name while keeping Op Modes and the Robot Controller application installed on the Control Hub.


Step

Image

Press and hold the button on the front of the Control Hub.



While pressing the button, power on the Control Hub.

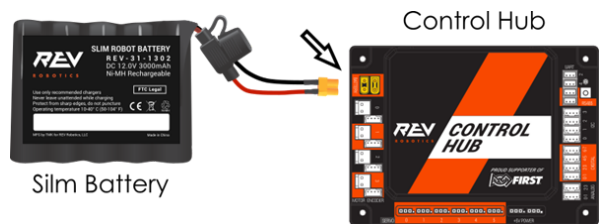

Release button when the Control Hub LED flashes PINK. When the Control Hub flashes BLUE then GREEN, it has completed the reset and is ready to connect.